

SPARE PARTS




Kennedy

INTEGRATED HYGIENE SOLUTIONS

CONTENTS

How to Order	3
Hand Washing	4
Savona Foam	5
Savona Liquid	6
Savona Wopa	7
Savona Auto Foam	8
Savona Auto Liquid	9
Hand Drying	10
Prima	11
V3 POD	12
Auto POD	13
Integra	14
Tekna	15
Toilet Tissue	16
Jumbo	17
Maxima	18
Sigma	19
Sani sing	20
Seatsan	21
Seatsan Auto	22
Activa	23
Air Freshening	24
Spa	25
Sanitary Disposal	26
Intima Foot pedal	27
Intima Mini Foot pedal	28
Intima Auto	29
Intima Mini Auto	30
Nova Foot pedal	31
Nova Auto	32

HOW TO ORDER

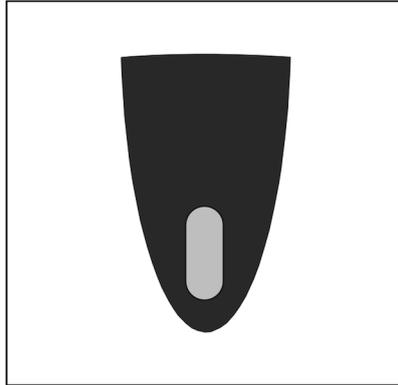

PART NAME →

SAVONA INSERT - BLACK WITH WINDOW

118800-1-1201

← PART NUMBER

Once you find the parts you need, send your request to the Kennedy sales team.
For example:

- Part name SAVONA INSERT - BLACK WITH WINDOW
- Part number 180-1219 BLK
- Quantity* 10

*Minimum order quantity applies, please enquire with sales

Once you have completed your spare parts order, email it to: sales@kennedy-hygiene.com


Call us on: +44 (0) 1825 768141

Or complete our web contact form: <https://khg.squareone.digital/contact/>

HAND


WASHING

SAVONA FOAM

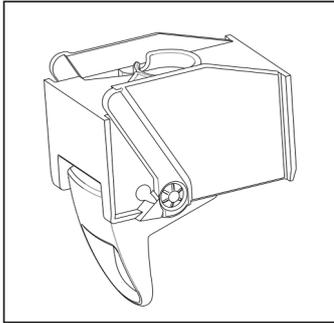


SAVONA FOAM PUMP MODULE
AND LEVER - WHITE

133-1125 W2

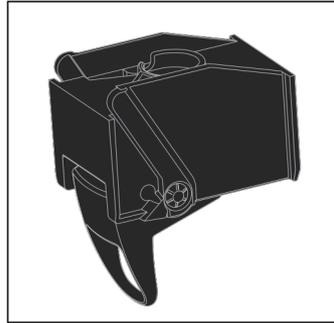


SAVONA FOAM PUMP MODULE
AND LEVER - BLACK

133-1125 B

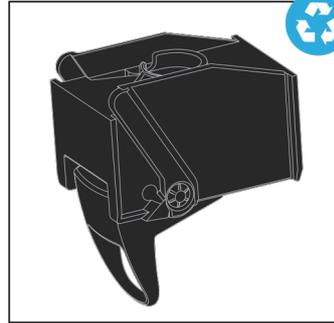


SAVONA FOAM PUMP MODULE
AND LEVER - RECYCLED BLACK

133-1125 BLK3

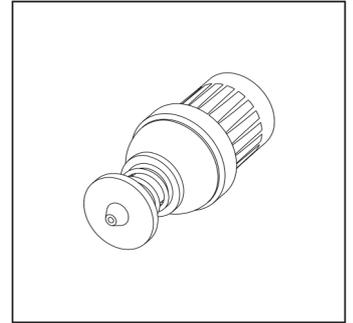

SAVONA FOAM - PUMP WITH
SPRING

133-1151

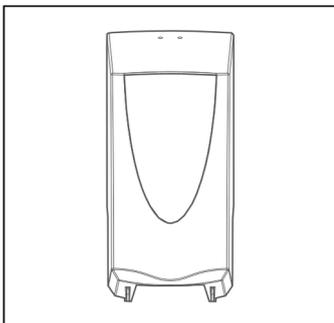


SAVONA FOAM COVER - WHITE
(NO INSERT)

133-1209 WH2




SAVONA FOAM COVER - RECYCLED
BLACK (NO INSERT)

133-1209 BLK3

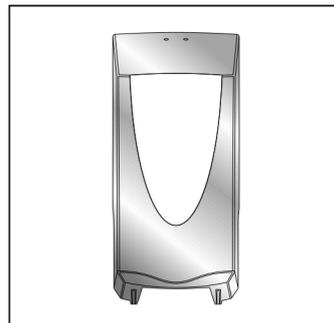


SAVONA FOAM COVER - CHROME
(NO INSERT)

133-1209 CHR

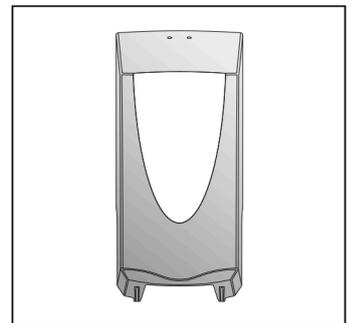

SAVONA FOAM COVER - DESIGNER
(NO INSERT)


133-1209 PTN

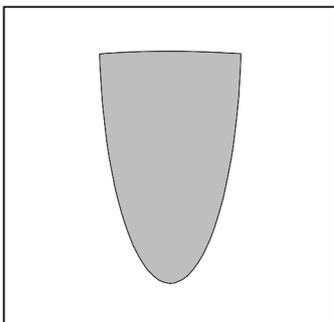

SAVONA FOAM INSERT -
TRANSPARENT

113830-1-1201


MOQ: 10

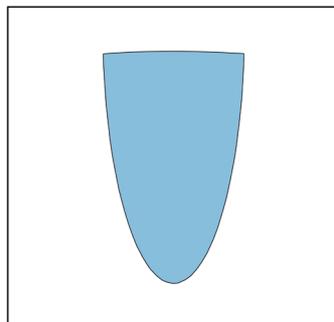

SAVONA FOAM INSERT -
TRANSLUCENT BLUE

C G021 133-1210 T02

MOQ: 10

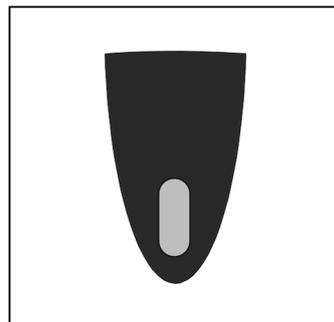

SAVONA FOAM INSERT - BLACK
WITH WINDOW

113830-1-1201


MOQ: 10



Kennedy


INTEGRATED HYGIENE SOLUTIONS

SAVONA LIQUID

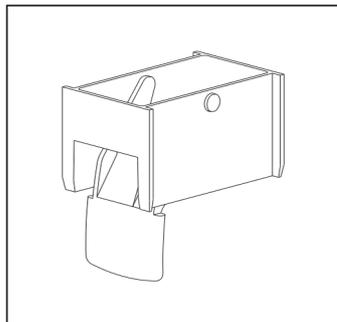

SAVONA LIQUID PUMP MODULE
AND LEVER - WHITE

133-1053 W2

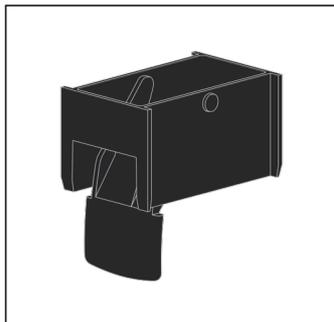


SAVONA LIQUID PUMP MODULE
AND LEVER - BLACK

133-1053 B




SAVONA LIQUID PUMP MODULE
AND LEVER - RECYCLED BLACK

133-1053 BLK3

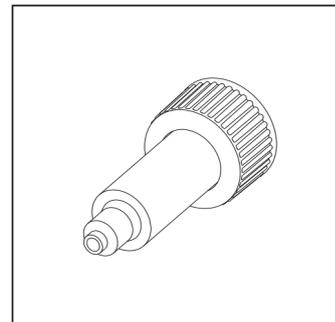

SAVONA LIQUID - NOZZLE

133-1034

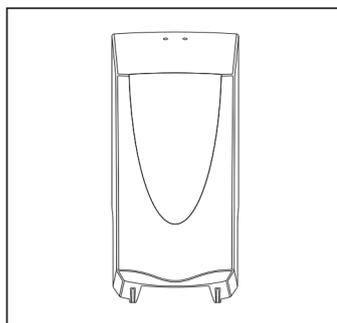


SAVONA LIQUID COVER - WHITE
(NO INSERT)

133-1209 WH2




SAVONA LIQUID COVER - RECYCLED
BLACK (NO INSERT)

133-1209 BLK3

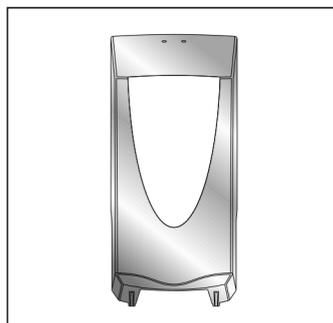


SAVONA LIQUID COVER - CHROME
(NO INSERT)

133-1209 CHR

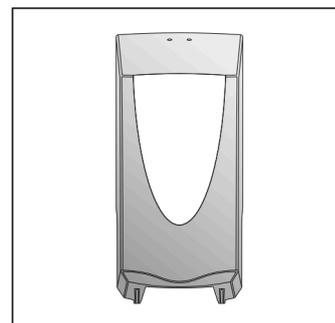

SAVONA LIQUID COVER - DESIGNER
(NO INSERT)


133-1209 PTN

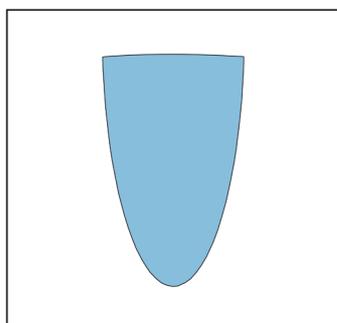

SAVONA LIQUID INSERT -
TRANSLUCENT BLUE

133-1210 T02


MOQ: 10

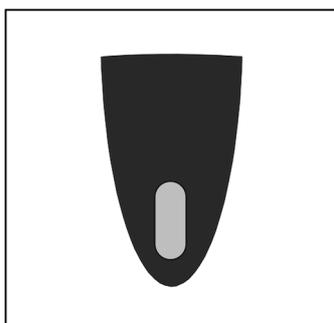

SAVONA LIQUID INSERT - BLACK
WITH WINDOW

113830-1-1201

MOQ: 10

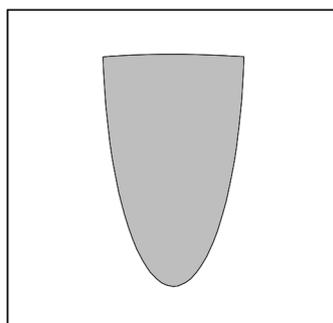

SAVONA LIQUID INSERT -
TRANSPARENT

B GLK2

113830-1-1201


MOQ: 10



Kennedy


INTEGRATED HYGIENE SOLUTIONS

SAVONA WOPA

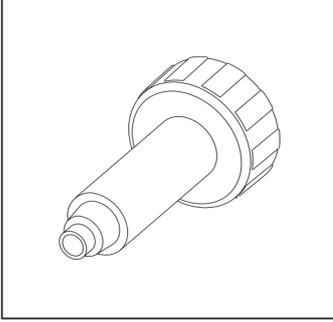

SAVONA WOPA - PUMP NOZZLE

118-1040

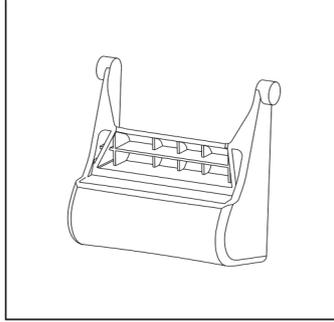

SAVONA WOPA LEVER - WHITE


141-1005 WH2



Kennedy

INTEGRATED HYGIENE SOLUTIONS

SAVONA AUTO FOAM

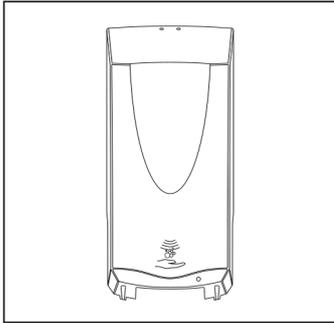


SAVONA AUTO FOAM COVER -
WHITE (NO INSERT)

155-9001



SAVONA AUTO FOAM COVER -
RECYCLED BLACK (NO INSERT)

155-9001 BLK3

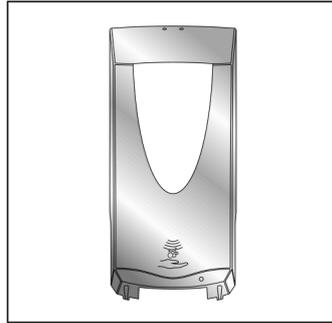


SAVONA AUTO FOAM COVER -
CHROME (NO INSERT)

155-9009




SAVONA AUTO FOAM COVER -
DESIGNER (NO INSERT)

155-9011

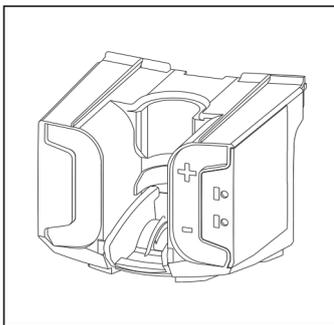


SAVONA AUTO FOAM - MODULE

155-9002

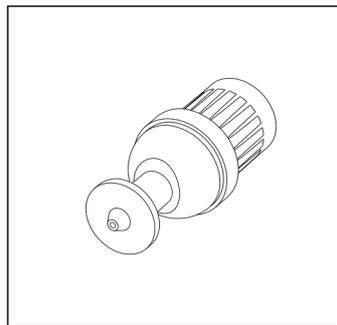

SAVONA AUTO FOAM - PUMP


133-1208

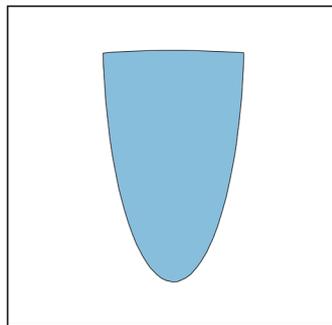

SAVONA AUTO FOAM INSERT -
TRANSLUCENT BLUE

133-1210 T02


MOQ: 10

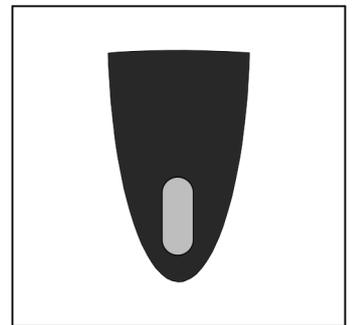

SAVONA AUTO FOAM INSERT -
BLACK WITH WINDOW

113830-1-1201

MOQ: 10

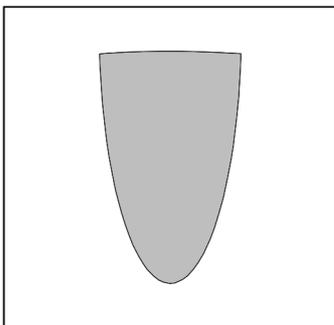

SAVONA AUTO FOAM INSERT -
TRANSPARENT

133-1210 C01


MOQ: 10



Kennedy

INTEGRATED HYGIENE SOLUTIONS

SAVONA AUTO LIQUID

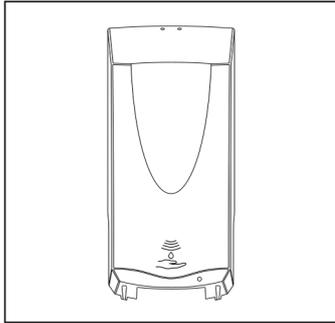

SAVONA AUTO LIQUID COVER -
WHITE (NO INSERT)

155-9012



SAVONA AUTO LIQUID COVER -
RECYCLED BLACK (NO INSERT)

155-9012 BLK3




SAVONA AUTO LIQUID COVER -
CHROME (NO INSERT)

155-9013 CHR




SAVONA AUTO LIQUID COVER -
DESIGNER (NO INSERT)

155-9014 PTN

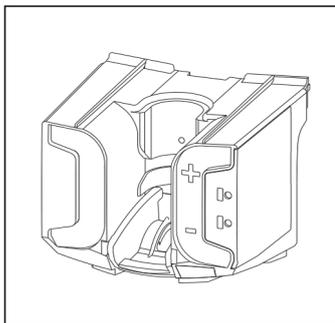


SAVONA AUTO LIQUID - MODULE

155-9040

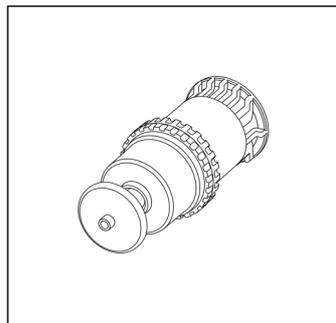

SAVONA AUTO LIQUID - HIGH DOSE
LIQUID PUMP


133-1241

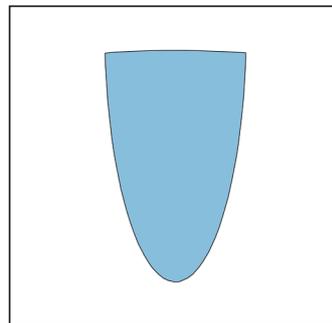

SAVONA AUTO LIQUID INSERT -
TRANSLUCENT BLUE

133-1210 T02


MOQ: 10

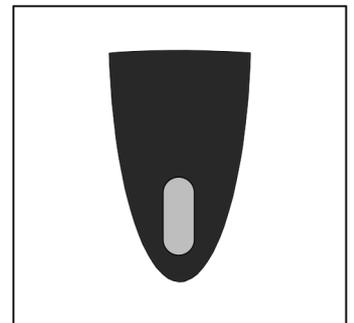

SAVONA AUTO LIQUID INSERT -
BLACK WITH WINDOW

113830-1-1201

MOQ: 10

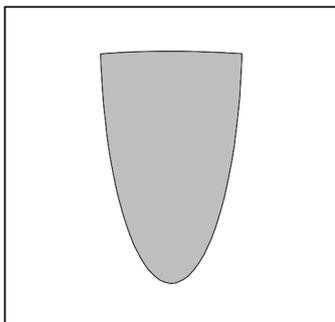

SAVONA AUTO LIQUID INSERT -
TRANSPARENT

133-1210 C01

MOQ: 10




Kennedy

INTEGRATED HYGIENE SOLUTIONS

HAND


DRYING

PRIMA

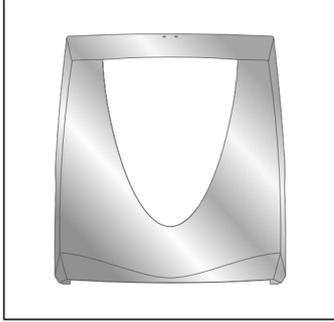

PRIMA COVER - CHROME (NO INSERT)

161-1001 CHR

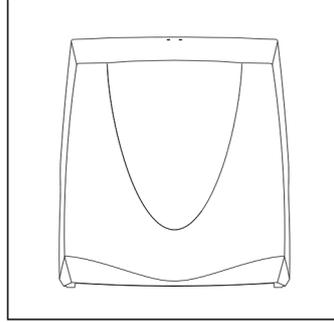


PRIMA COVER - WHITE (NO INSERT)

161-1001 WH2




PRIMA COVER - RECYCLED BLACK (NO INSERT)

161-1001 BLK3

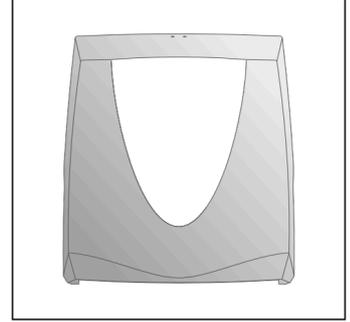


PRIMA COVER - DESIGNER (NO INSERT)

161-1001 PTN

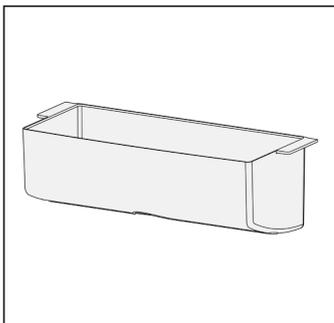

PRIMA TRAY - TRANSPARENT


161-1003 C01

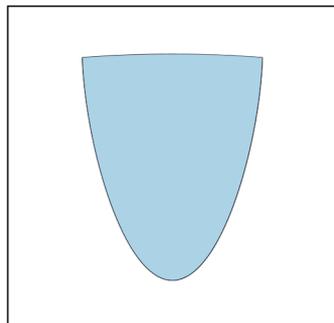

PRIMA INSERT - TRANSLUCENT BLUE

161-1006 T02


MOQ: 10

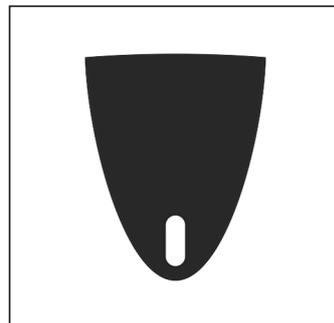

PRIMA INSERT - BLACK WITH WINDOW

161-1014 BLK

MOQ: 10

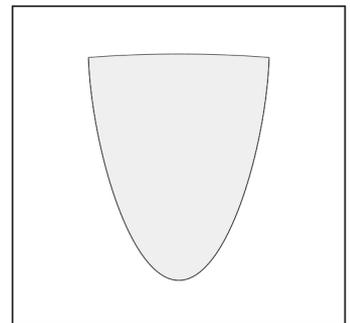

PRIMA INSERT - TRANSPARENT

161-1006 C01


MOQ: 10



Kennedy

INTEGRATED HYGIENE SOLUTIONS

POD V3

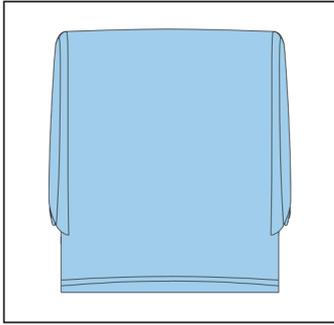


MK3 POD COVER - TRANSLUCENT BLUE

151-1001 T02




MK3 POD COVER - RECYCLED BLACK (WITH WINDOW)

180-1210 BLK3

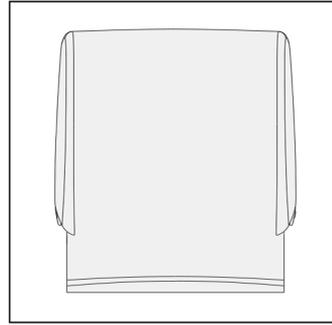


MK3 POD COVER - TRANSPARENT

151-1001 C01

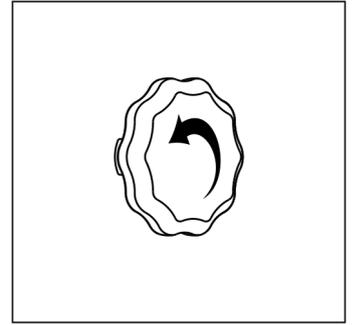

MK3 POD - HANDLE ASSEMBLY WHITE

180-1072 WH2

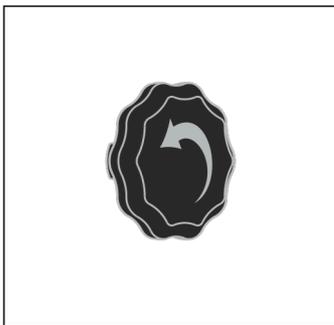


MK3 POD - HANDLE ASSEMBLY BLACK

180-1072 BLK




MK3 POD - HANDLE ASSEMBLY RECYCLED BLACK

180-1072 BLK3

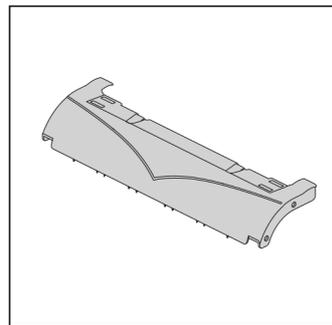


MK3 POD - GUARDIAN PLATE RECYCLED GREY

180-1003 G2

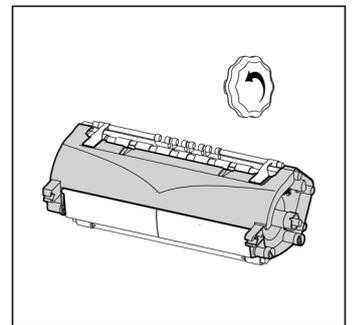


MK3 POD - MECHANISM KIT WITH WHITE HANDLE

180-0004 WH2

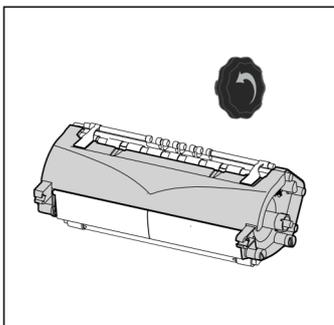


MK3 POD - MECHANISM KIT WITH BLACK HANDLE

180-0004 BLK

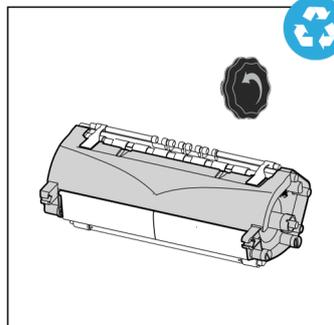


MK3 POD - MECHANISM KIT WITH RECYCLED BLACK HANDLE

180-0004 BLK3

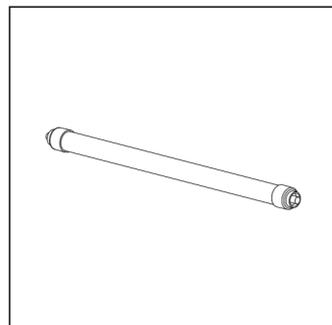

MK3 POD - FRONT ROLLER ASSEMBLY

180-0002-08

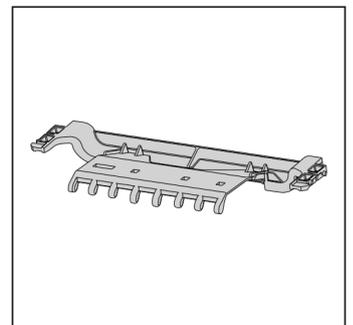

MK3 POD - COVER LOADING PLATE ASSEMBLY

180-1079 G2


****For Pod V4 spare parts, please get in touch with the sales team.***



Kennedy

INTEGRATED HYGIENE SOLUTIONS

AUTO POD

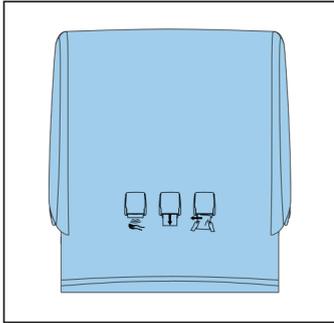


AUTO POD COVER - TRANSLUCENT BLUE

167-1101




AUTO POD COVER - RECYCLED BLACK (WITH WINDOW)

180-1210 BLK3

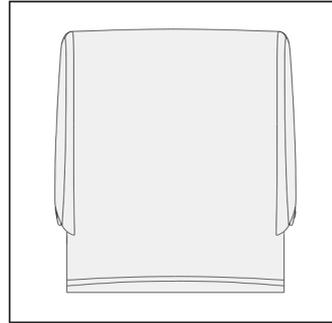


AUTO POD COVER - TRANSPARENT

151-1001 C01

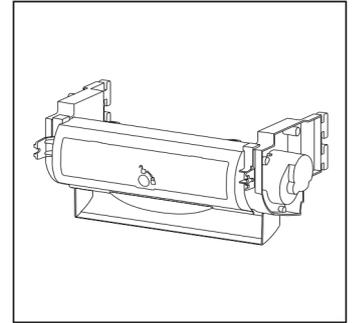


AUTO POD MECHANISM - WHITE

167-0001 WH2

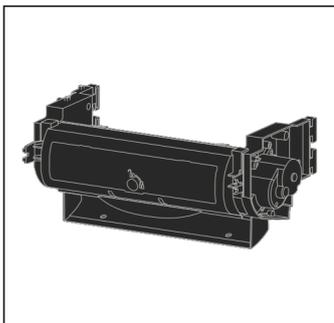

AUTO POD MECHANISM - BLACK

167-0001 BLK

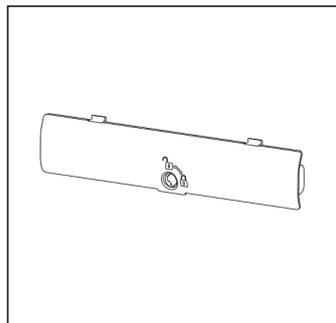

AUTO POD BATTERY FLAP - WHITE

167-1022 WH2



AUTO POD BATTERY FLAP - BLACK


167-1022 BLK



Kennedy


INTEGRATED HYGIENE SOLUTIONS

INTEGRA

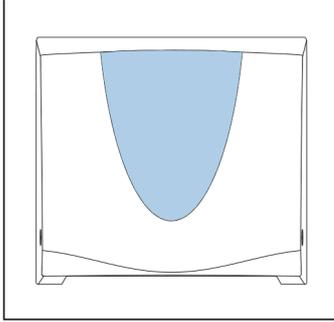


INTEGRA COVER ASSEMBLY - WHITE
(TRANSLUCENT BLUE INSERT)

143-3002

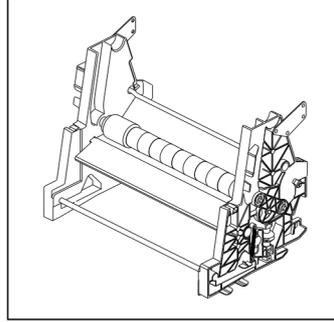


INTEGRA - MECHANISM

148-2000

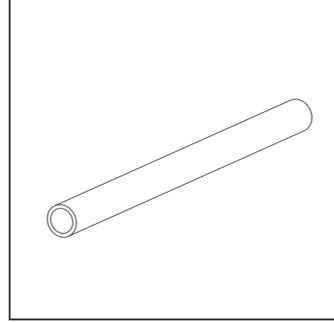


INTEGRA - CONTROL ROLLER

79-1039

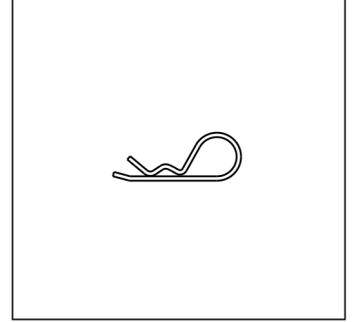


INTEGRA - MECHANISM SPRING
CLIP

79-1046

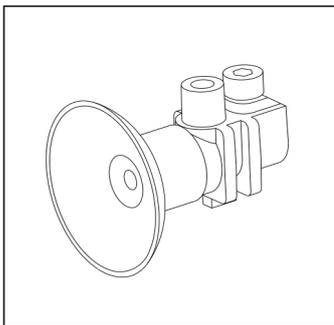


INTEGRA - TIMER

148-1061

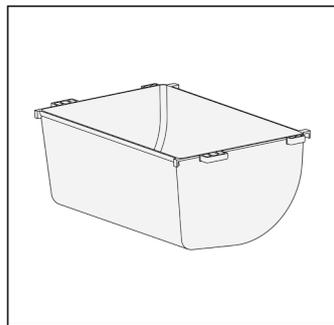

INTEGRA TOWEL BIN -
TRANSPARENT

79-1096 C01

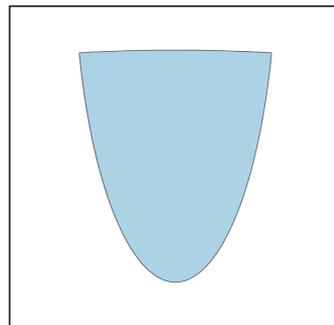

INTEGRA INSERT - TRANSLUCENT
BLUE

148-1072 T02


MOQ: 10



INTEGRA INSERT - RECYCLED BLACK

148-1072 BLK3

MOQ: 10

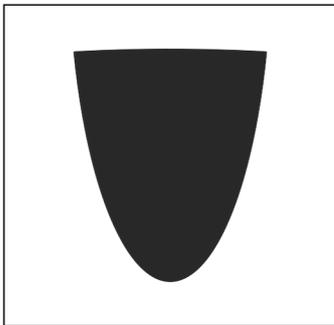

INTEGRA INSERT - BLACK


148-1072 BLK

MOQ: 10




Kennedy

INTEGRATED HYGIENE SOLUTIONS

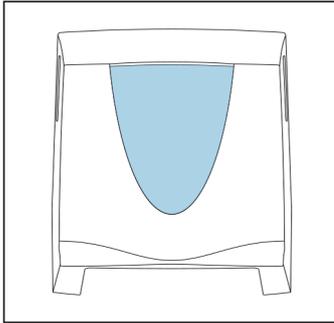


TEKNA COVER ASSEMBLY - WHITE
(TRANSLUCENT BLUE INSERT)

TSA 227

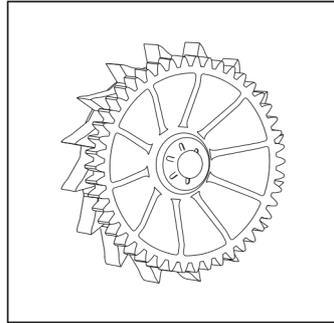


TEKNA - POWER SPRING

134-1069

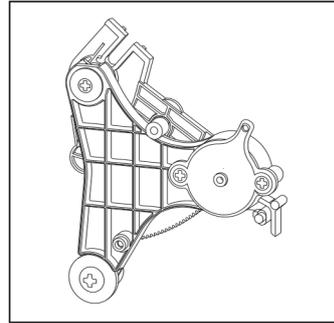


TEKNA - TIMER ARM ASSEMBLY

134-1195

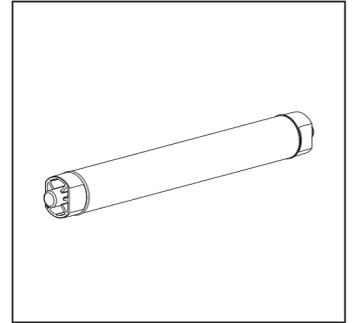


TEKNA - TOWEL CONTROL ROLLER

134-1194

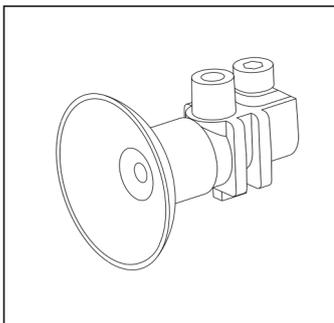

TEKNA - TIMER


148-1061

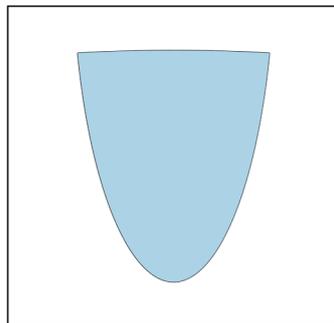

TEKNA INSERT - TRANSLUCENT
BLUE

148-1072 T02

MOQ: 10

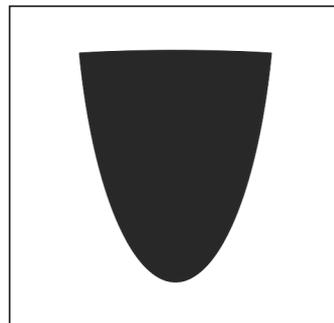

TEKNA INSERT - BLACK

148-1072 BLK

MOQ: 10




Kennedy

INTEGRATED HYGIENE SOLUTIONS

TOILET


TISSUE

JUMBO

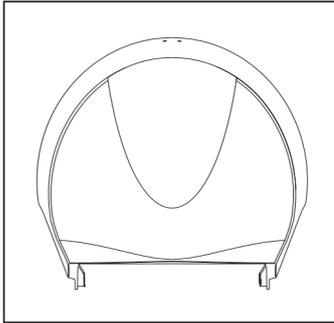


JUMBO COVER - WHITE (NO INSERT)

142-1015 WH2

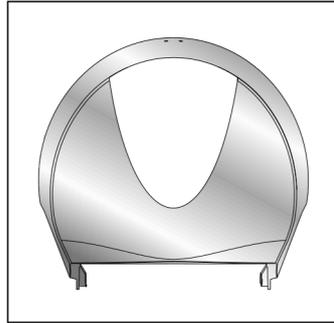

JUMBO COVER - CHROME (NO INSERT)

142-1015 CHR

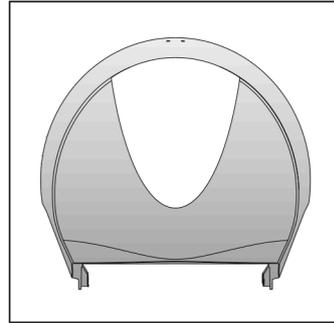


JUMBO COVER - DESIGNER (NO INSERT)

142-1015 PTN




JUMBO COVER - RECYCLED BLACK (NO INSERT)

142-1015 BLK3

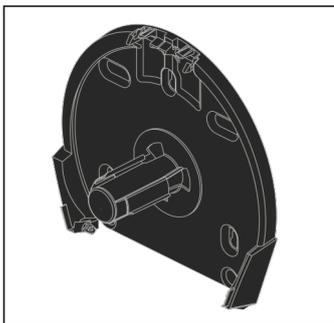

JUMBO BACKPLATE ASSEMBLY - BLACK


142-0007 BLK

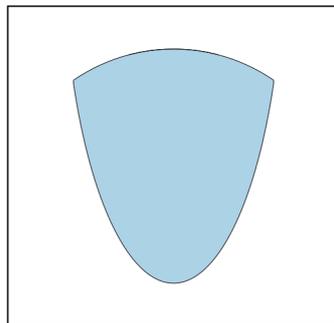

JUMBO INSERT - TRANSLUCENT BLUE

142-1016 T02


MOQ: 10

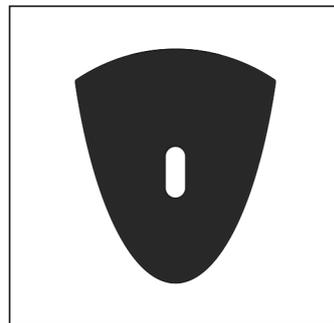

JUMBO INSERT - BLACK WITH WINDOW

142-1023 BLK

MOQ: 10

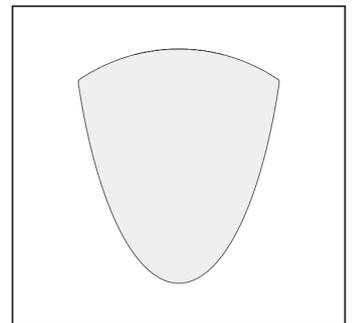

JUMBO INSERT - TRANSPARENT

142-1016 T02


MOQ: 10



Kennedy


INTEGRATED HYGIENE SOLUTIONS

MAXIMA

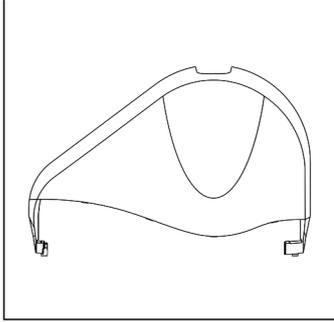


MAXIMA COVER - WHITE (NO INSERT, NO WAVE)

136-1017 WH2

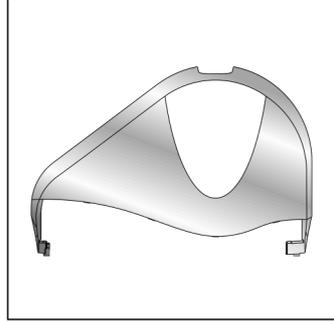


MAXIMA COVER - CHROME (NO INSERT, NO WAVE)

136-1017 CHR

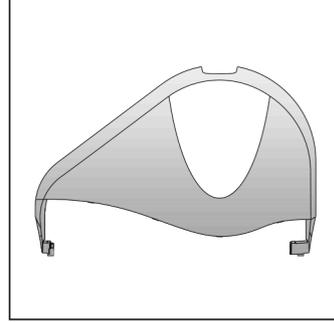


MAXIMA COVER - DESIGNER (NO INSERT, NO WAVE)

136-1017 PTN

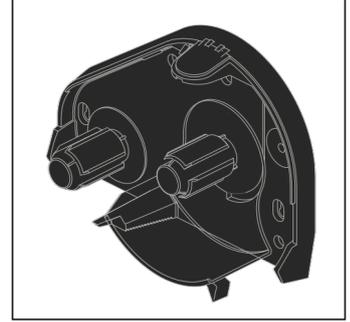

MAXIMA BACKPLATE ASSEMBLY - BLACK


136-0006

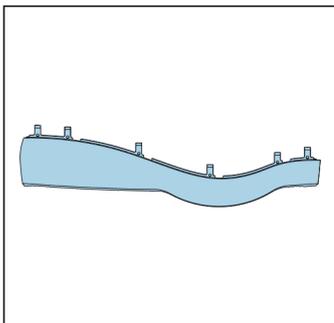

MAXIMA WAVE - TRANSLUCENT BLUE

136-1018 T02


MOQ: 10

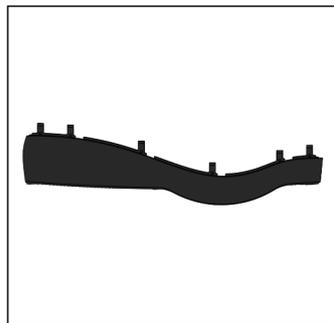

MAXIMA WAVE - BLACK

136-1018 BLK


MOQ: 10

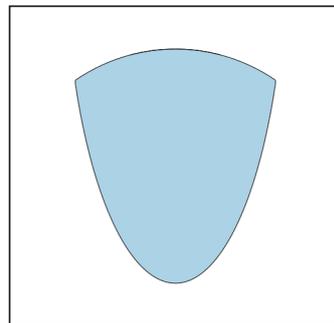

MAXIMA INSERT - TRANSLUCENT BLUE

142-1016 T02

MOQ: 10

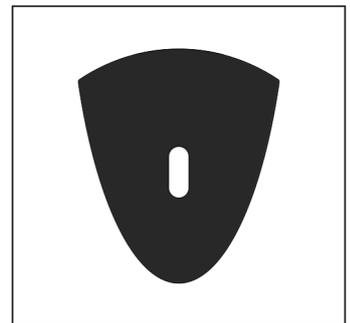

MAXIMA INSERT - BLACK WITH WINDOW

142-1023 BLK


MOQ: 10



Kennedy


INTEGRATED HYGIENE SOLUTIONS

SIGMA

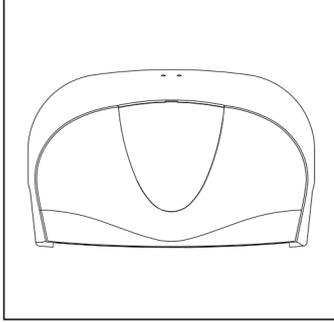


SIGMA COVER - WHITE (NO INSERT)

137-1019 WH2

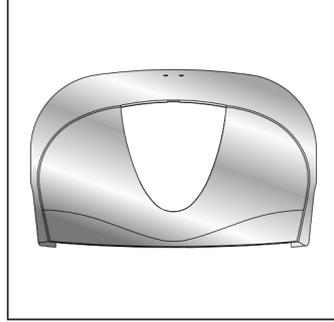


SIGMA COVER - CHROME (NO INSERT)

137-1019 CHR

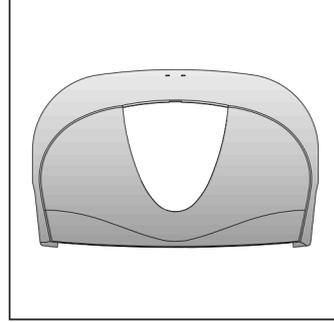


SIGMA COVER - DESIGNER (NO INSERT)

137-1019 PTN

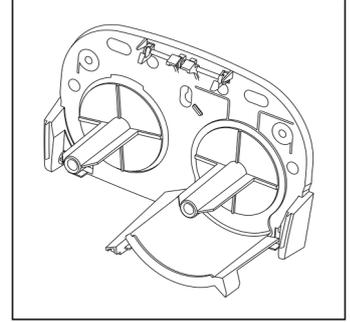


SIGMA CORE BACKPLATE ASSEMBLY - WHITE

137-0003 WH2

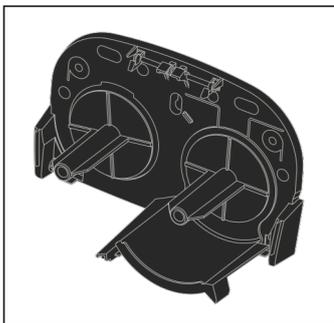


SIGMA CORE BACKPLATE ASSEMBLY - BLACK

137-0003 B

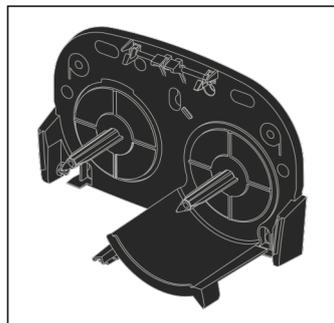

SIGMA CORELESS BACKPLATE ASSEMBLY - BLACK


137-0007 B

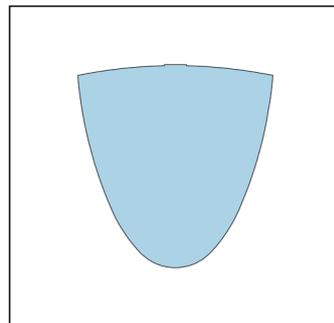

SIGMA INSERT - TRANSLUCENT BLUE

137-1020 T02


MOQ: 10

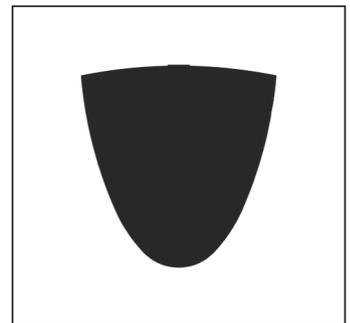

SIGMA INSERT - BLACK

137-1020 BLK

MOQ: 10

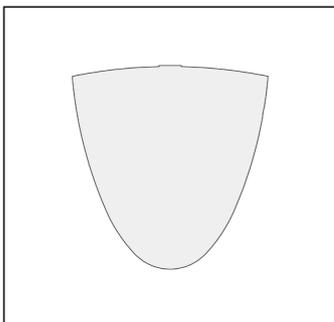

SIGMA INSERT - TRANSPARENT

137-1020 C01

MOQ: 10




Kennedy

INTEGRATED HYGIENE SOLUTIONS

TOILET


SANITISING

SEATSAN

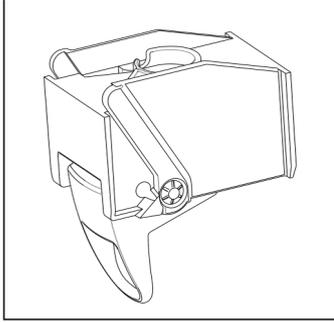


SEATSAN PUMP MODULE AND LEVER - WHITE

133-1125 W2

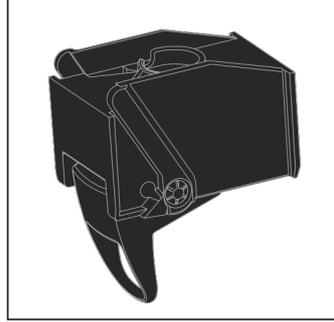


SEATSAN PUMP MODULE AND LEVER - BLACK

133-1125 B

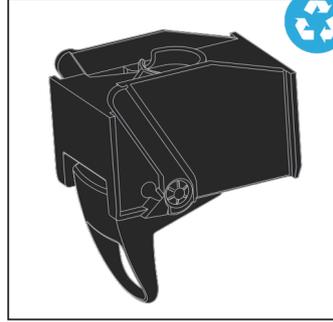


SEATSAN PUMP MODULE AND LEVER - RECYCLED BLACK

133-1125 BLK3

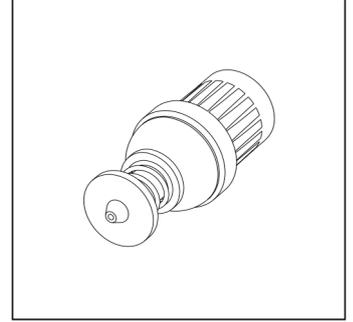

SEATSAN - FOAM PUMP WITH SPRING

133-1151

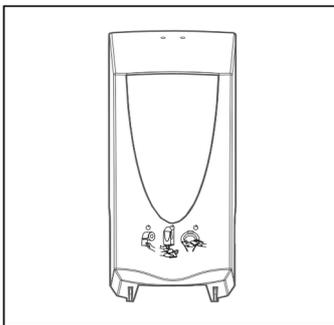


SEATSAN COVER - WHITE (NO INSERT)

133-1217 WH2



SEATSAN COVER - RECYCLED BLACK (NO INSERT)


133-1285 BLK3

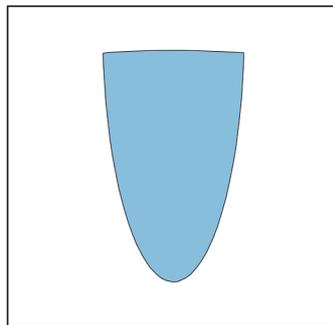

SEATSAN INSERT - TRANSLUCENT BLUE

133-1210 T02


MOQ: 10

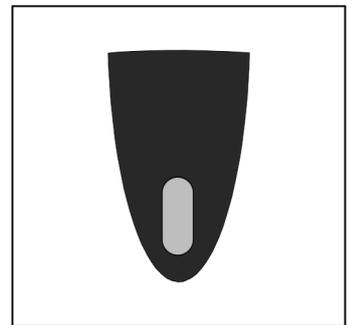

SEATSAN INSERT - BLACK WITH WINDOW

113830-1-1201

MOQ: 10

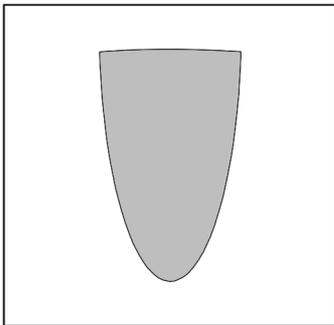

SEATSAN INSERT - TRANSPARENT

113830-1-1201


MOQ: 10



Kennedy


INTEGRATED HYGIENE SOLUTIONS

SEATSAN AUTO

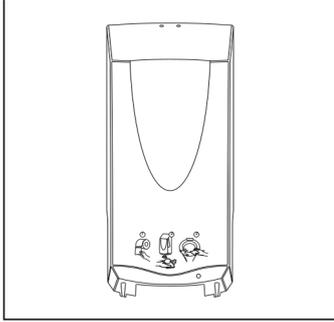


SEATSAN AUTO COVER - WHITE
(NO INSERT)

155-9015 WH2

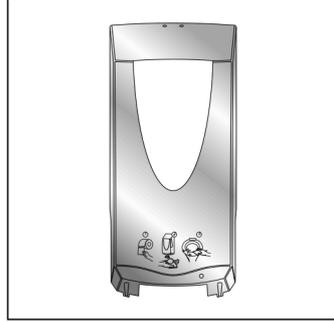


SEATSAN AUTO COVER - CHROME
(NO INSERT)

155-9016 CHR

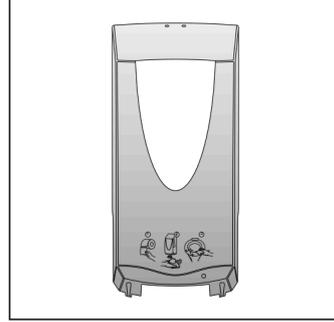


SEATSAN AUTO COVER -
DESIGNER (NO INSERT)

155-9016 PTN

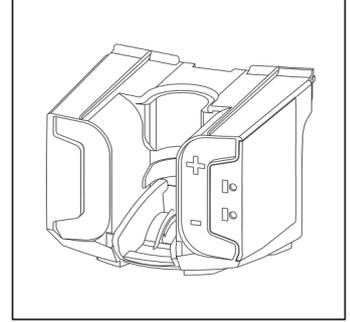


SEATSAN AUTO - MODULE

155-9002

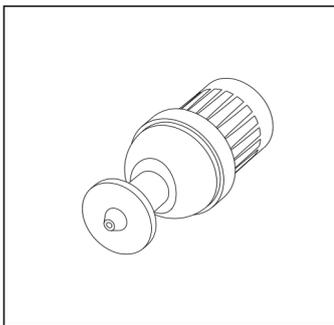

SEATSAN AUTO - PUMP


133-1208

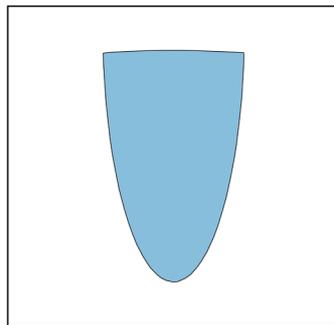

SEATSAN AUTO INSERT -
TRANSLUCENT BLUE

133-1210 T02


MOQ: 10

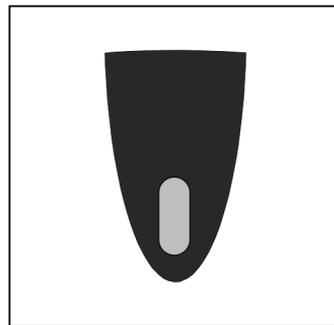

SEATSAN AUTO INSERT - BLACK
WITH WINDOW

113830-1-1201

MOQ: 10

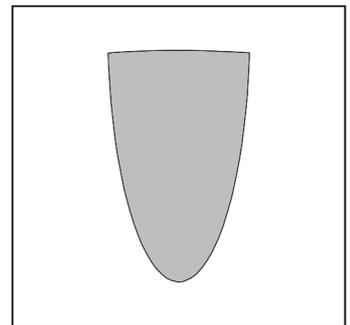

SEATSAN AUTO INSERT -
TRANSPARENT

B GLK2

133-1210 C01


MOQ: 10



Kennedy


INTEGRATED HYGIENE SOLUTIONS

ACTIVA

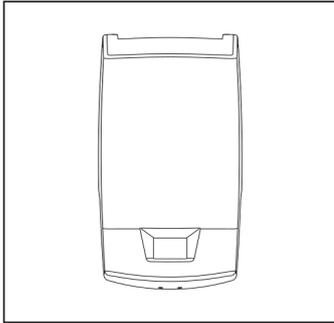


ACTIVA COVER - WHITE

139-1002 WH2

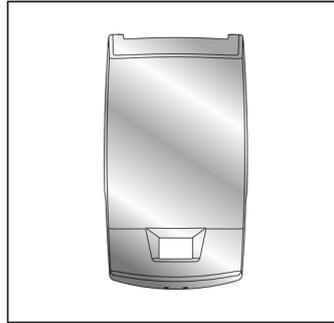


ACTIVA COVER - CHROME

139-1002 CHR

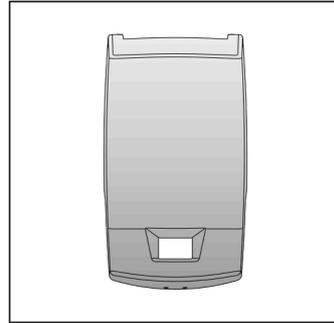


ACTIVA COVER - DESIGNER

139-1002 PTN

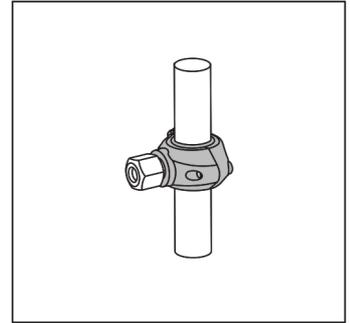


SADDLE KIT - GREY

139-1012 G

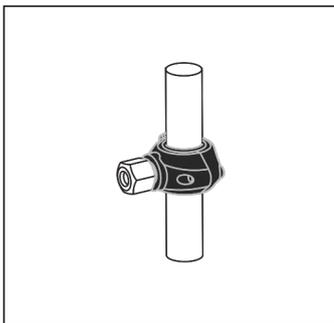


SADDLE KIT - BLACK

139-1012 B

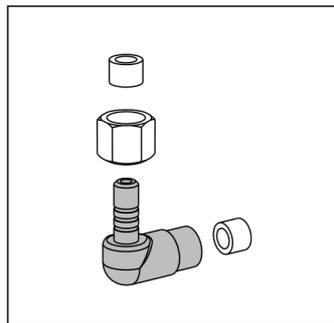


IN-LINE KIT - GREY

139-1027 G

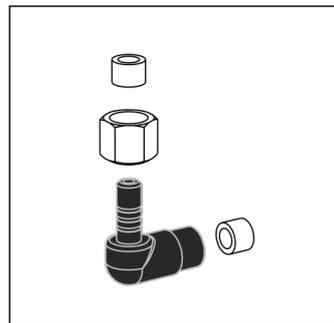


IN-LINE KIT - BLACK

139-1027 B

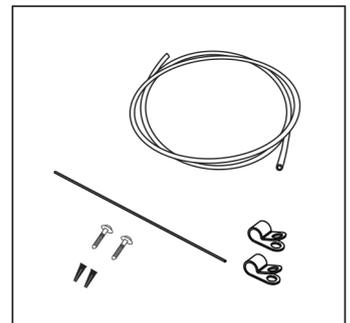

PLASTIC TUBE KIT

139-1025

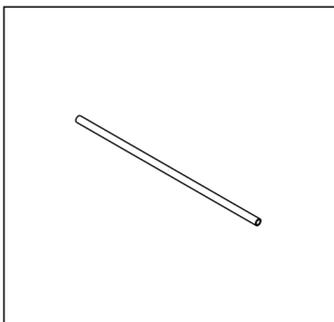

METAL TUBE

139-1044




Kennedy

INTEGRATED HYGIENE SOLUTIONS

AIR

FRESHENING

SPA

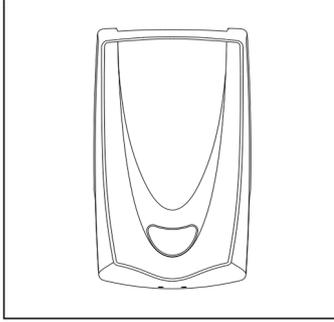

SPA COVER - WHITE (NO INSERT)


146-1072 WH2

MOQ: 8




SPA COVER - RECYCLED BLACK (NO INSERT)

146-1072 BLK3

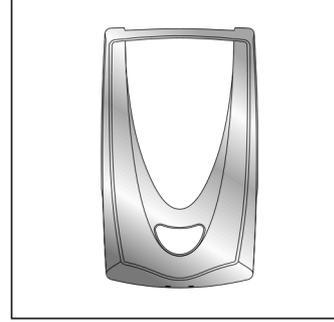


SPA COVER - CHROME (NO INSERT)

146-1072 CHR

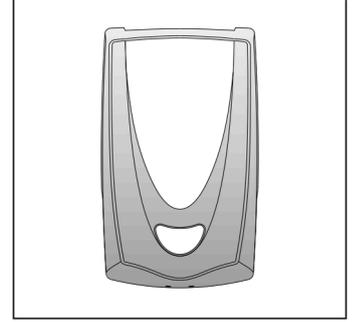

SPA COVER - DESIGNER (NO INSERT)

146-1072 PTN

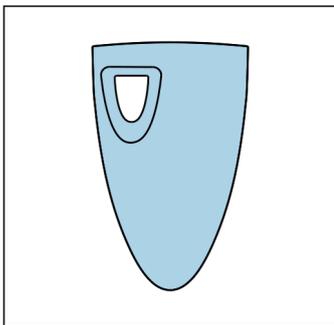

SPA INSERT - TRANSLUCENT BLUE

146-1073 T01


MOQ: 10



SPA INSERT - RECYCLED BLACK

146-1073 BLK3

MOQ: 10

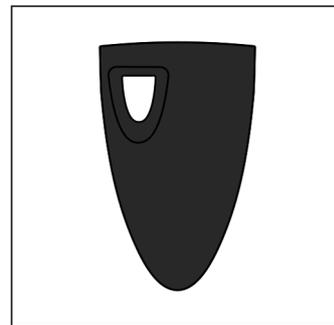

SPA INSERT - BLACK

146-1073 BLK

MOQ: 10




Kennedy

INTEGRATED HYGIENE SOLUTIONS

SANITARY


DISPOSAL

INTIMA (FOOTPEDAL)

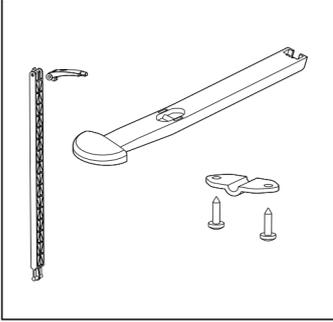


INTIMA PEDAL ASSEMBLY KIT -
WHITE

143-1111 WH2

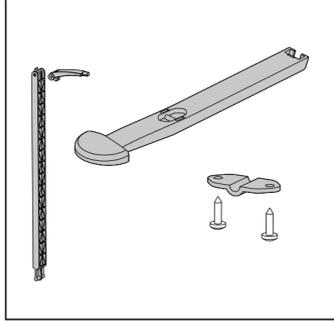


INTIMA PEDAL ASSEMBLY KIT -
GREY

143-1111 GRY

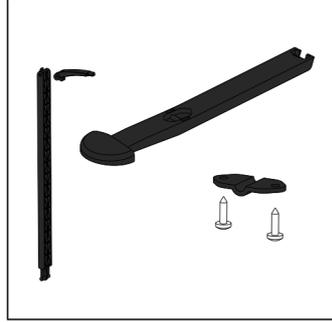


INTIMA PEDAL ASSEMBLY KIT -
BLACK

143-1111 BLK

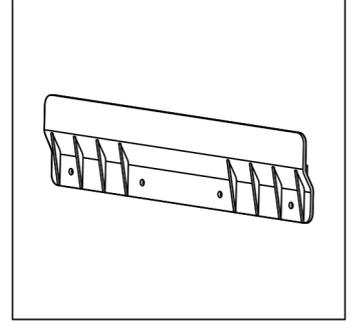

INTIMA WALL BRACKET - WHITE

143-1012 WH2

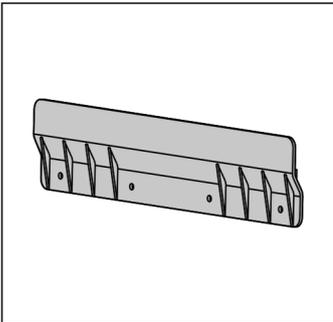

INTIMA WALL BRACKET - GREY

143-1012 GRY



INTIMA WALL BRACKET - BLACK


143-1012 BLK



Kennedy


INTEGRATED HYGIENE SOLUTIONS

INTIMA MINI (FOOTPEDAL)

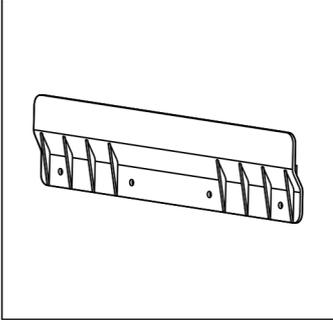

INTIMA WALL BRACKET - WHITE

143-1012 WH2

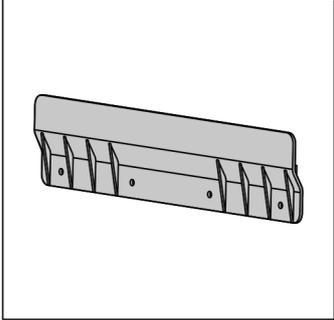

INTIMA WALL BRACKET - GREY

143-1012 GRY



INTIMA WALL BRACKET - BLACK


143-1012 BLK



Kennedy

INTEGRATED HYGIENE SOLUTIONS


INTIMA (AUTO)

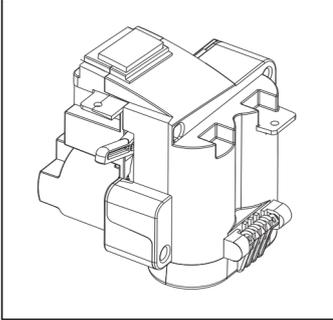

INTIMA AUTO - MODULE


143-1130

MOQ: 8

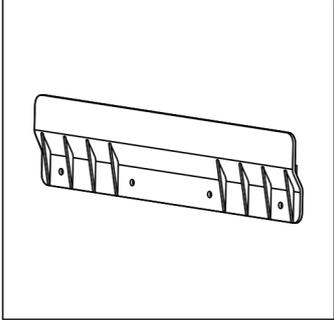

INTIMA WALL BRACKET - WHITE

143-1012 WH2

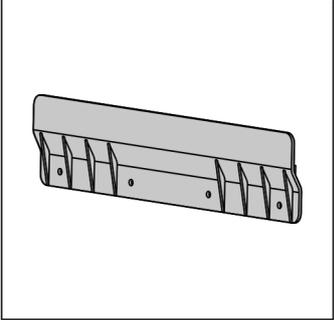

INTIMA WALL BRACKET - GREY

143-1012 GRY



INTIMA WALL BRACKET - BLACK


143-1012 BLK



Kennedy

INTEGRATED HYGIENE SOLUTIONS


INTIMA MINI (AUTO)

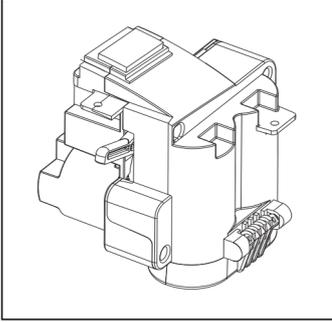

INTIMA MINI AUTO - MODULE


143-1130

MOQ: 8

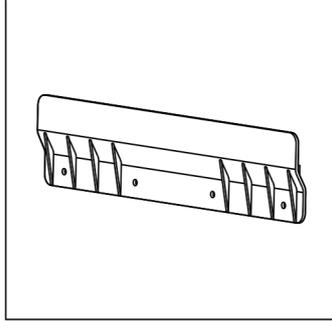

INTIMA WALL BRACKET - WHITE

143-1012 WH2

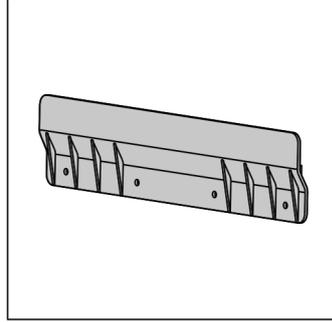

INTIMA WALL BRACKET - GREY

143-1012 GRY



INTIMA WALL BRACKET - BLACK


143-1012 BLK



Kennedy


INTEGRATED HYGIENE SOLUTIONS

NOVA (FOOTPEDAL)

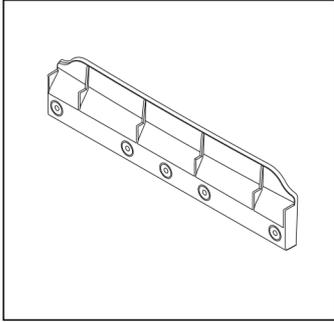


NOVA WALL BRACKET - WHITE

172-1039 WH2

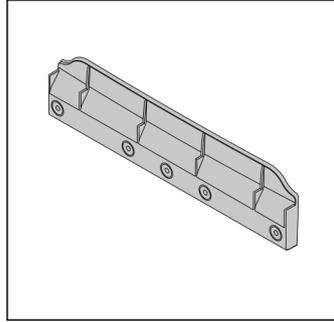


NOVA WALL BRACKET - GREY

172-1039 GRY

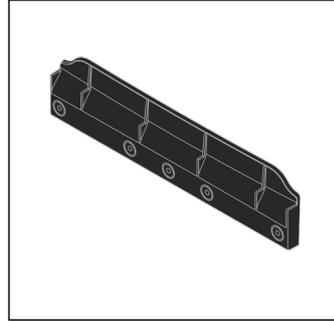


NOVA WALL BRACKET - BLACK

172-1039 BLK

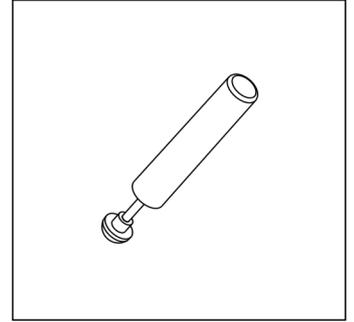


NOVA FOOTPEDAL - DAMPER

172-1055

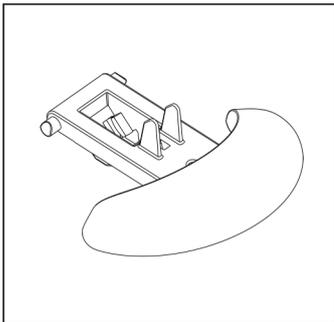


NOVA FOOTPEDAL - FOOTPEDAL

172-1007 W2

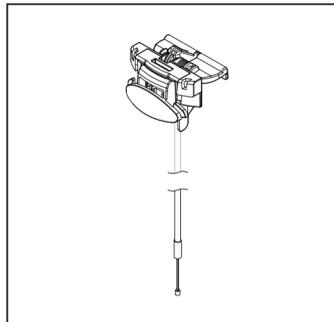


NOVA FOOTPEDAL - LEVER MODULE ASSEMBLY WHITE (FOR ABS BINS)

172-1111 W2

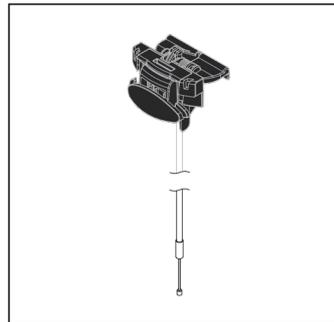


NOVA FOOTPEDAL - LEVER MODULE ASSEMBLY BLACK (FOR ABS BINS)

172-1111 BLK

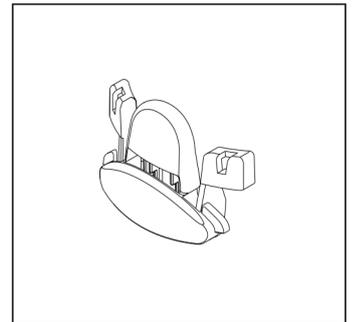

NOVA FOOTPEDAL - SLIM LATCH WHITE (FOR ABS BINS)

172-1010 W2

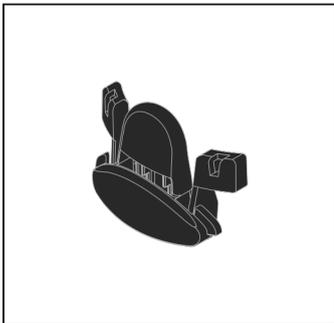

NOVA FOOTPEDAL - SLIM LATCH BLACK (FOR ABS BINS)


117820-1-1001



Kennedy


INTEGRATED HYGIENE SOLUTIONS

NOVA (AUTO)

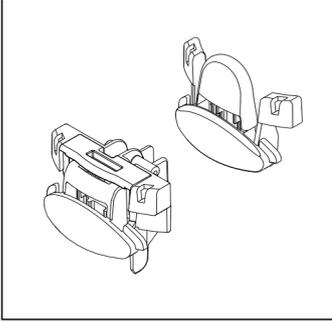


**NOVA AUTO LATCH REPLACEMENT
KIT - WHITE (FOR ABS BINS)**

172-1217 WH2

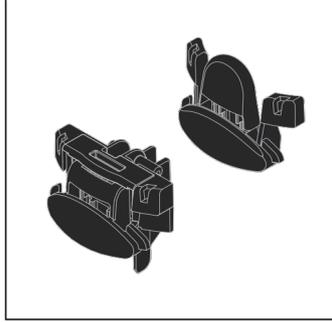


**NOVA AUTO LATCH REPLACEMENT
KIT - BLACK (FOR ABS BINS)**

172-1217 BLK

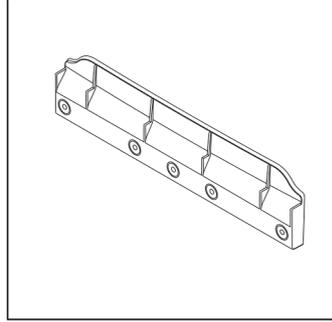


NOVA WALL BRACKET - WHITE

172-1039 WH2

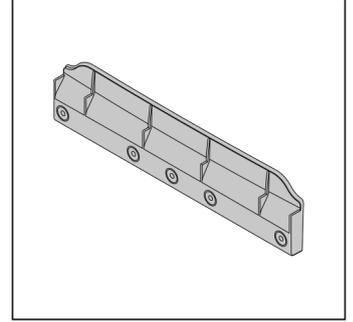

NOVA WALL BRACKET - GREY

172-1039 GRY

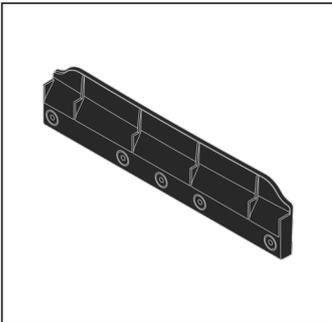

NOVA WALL BRACKET - BLACK

172-1039 BLK



Kennedy

INTEGRATED HYGIENE SOLUTIONS